

# SYNTHIAM

[synthiam.com](http://synthiam.com)

## Sudo's Guide To Dynamixels

So, you finally have your EZ-B v4. You love it already, and you're ready to hook this baby up to some sort of Dynamixel powered creation. You go to plug everything in, and - wait. You have no idea how to set those Dynamixels up.

Well, I do, and I'll show you how.

SECTION 1: GETTING TO KNOW DYNAMIXELS

Dynamixels are intelligent servos that can track not only position, but temperature, speed, and load. The servo can automagically shut itself of incase of...

Last Updated: 9/17/2015

# Step 1

---

So, you finally have your EZ-B v4. You love it already, and you're ready to hook this baby up to some sort of Dynamixel powered creation. You go to plug everything in, and - wait. You have no idea how to set those Dynamixels up.

Well, I do, and I'll show you how.

## SECTION 1: GETTING TO KNOW DYNAMIXELS

Dynamixels are intelligent servos that can track not only position, but temperature, speed, and load. The servo can automatically shut itself off in case of a failure. These servos are also incredibly strong. But there's one feature in particular that is useful, but at the same time a little hard to wrap your head around. In this section, we will cover daisy chaining and other features of the AX-12A Dynamixel; however, most of the servos in the Dynamixel family work exactly alike, so this guide can help you with most models.

On the back of all of your Dynamixels, you will notice a couple things. A place for a bolt, a light, two wire ports, and the ID. Let's go over all of them so you know what they do:

Light - Blinks once when turning on. If the light is flashing, there is a failure of some sort.

Screw hole - Allows you to attach the Dynamixel to a bracket.

Wire ports - Allows you to connect to other Dynamixels, in a long strand of servos, both to and from other Dynamixels. This means both ports work the same way, which means it doesn't matter which side is plugged in. (see image below)

ID - What the EZ-B and EZ Builder address the Dynamixel as.

## PART 2: CONNECTING YOUR DYNAMIXELS TO THE EZ-B

All Dynamixels must plug into port D5 in order to properly work. This means that all of your Dynamixels must plug into one port. If you have more than one strand of connectable Dynamixels, you will have to use a Dynamixel splitter hub, like this one [here](#):

You can either run a cable to the EZ-B via a power base or via the powered splitter. I advise that you use only one, as using both at once can brown out the EZ-B.

Q: So, now that that's done, what power supply do I use? Mains or a battery pack?

A: Both will work just fine. Just make sure you have an adequate power supply at around 10v.

"But wait!" you scream. "Dynamixels can run at 9v-12v! Why 10v?"

Because voltage is gradually lost over time depending on how many servos you're running at once, as well as when the EZ-B is powered on. The more servos you have, the higher you should up your voltage to get a steady 10v overall.

So, if you have power running to the EZ-B, Dynamixels set up to port D5 (as well as the optional splitter) you should have something resembling this:

Now that you're powered on, let's move into EZ Builder and get your Dynamixels running.

## PART 3: OPERATING THE DYNAMIXELS WITH EZ-BUILDER

Connect to your EZ-B as usual (We won't be covering connections in this guide). Bring up a servo control panel and go to the servo configuration screen as shown below.

Click the Dynamixel box and scroll down until you see the ID of the Dynamixel you want to move (the ID on the back of the servo). In this demonstration, we'll be selecting Dynamixel AX18.

Select it and save the configuration. Congrats, you just set up your first Dynamixel in EZ

Builder! It should operate just like a normal servo. This applies to all servo control functions.

#### PART 4 (EXTRA): ASSIGNING A NEW ID TO BLANK SERVOS

When you buy a Dynamixel that doesn't come in the kit, the ID sticker will sometimes be blank, which means it hasn't be assigned a "real" ID. However, a tool in EZ Builder can give Dynamixels a new ID.

First, open up the Dynamixel Config. control in EZ Builder. You should see something similar to this:

All blank servos are assigned ID 1. If you have a dynamixel with the ID 1 already, remove it before you proceed. Simply choose the new ID you want (in this case, AX18) and press execute. EZ-Builder will assign it a new ID. That's it, you're done! You can also write the ID on the blank tag if so desired.

GUIDE LAST UPDATED: 12/9/2014